


Next-Generation Intercom Wiring Guide

DC-Powered Door Strike to Intercom

 Images are not to scale.

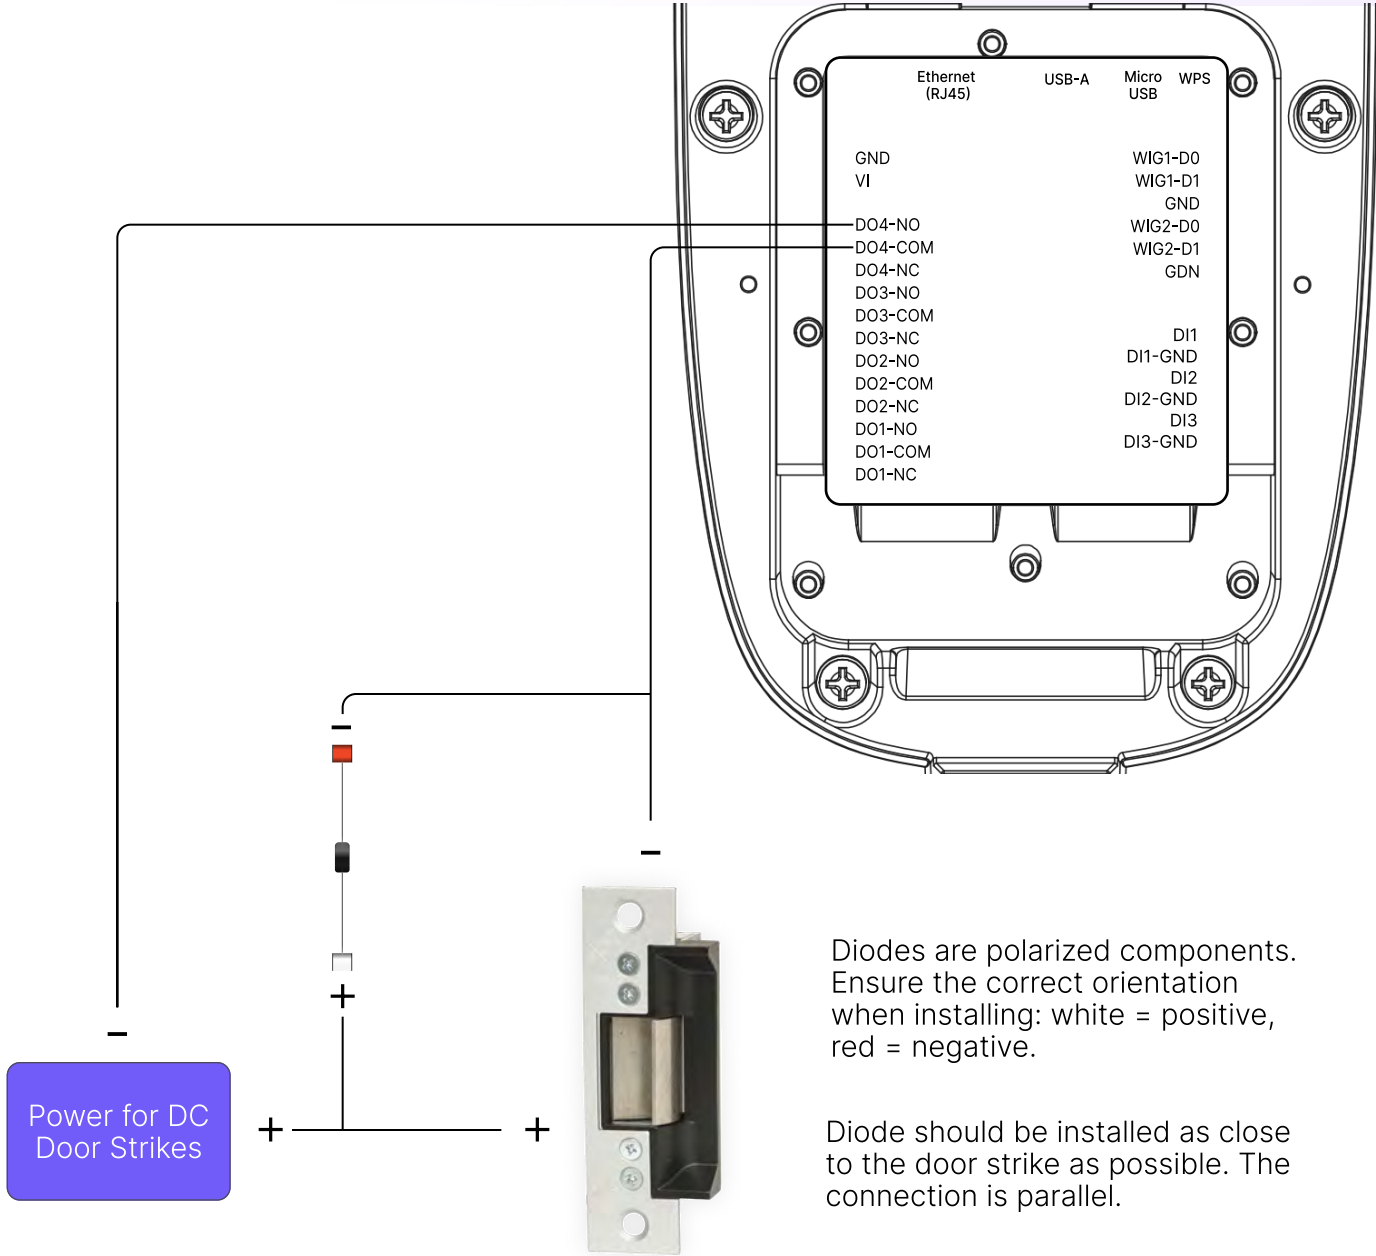

Diodes are polarized components. Ensure the correct orientation when installing: white = positive, red = negative.

Diode should be installed as close to the door strike as possible. The connection is parallel.

ButterflyMX supplies one 1N400X Series diode per Intercom.